


***Energizer®* Triple Beam LED Headlight Instruction Sheet**

ANGLE ADJUSTMENT:




Adjust light angle by rotating the light unit forward or backward.


BATTERY INSERTION / REPLACEMENT INSTRUCTIONS:

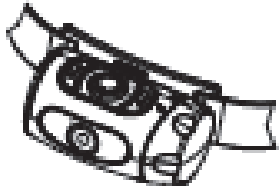


Step 1

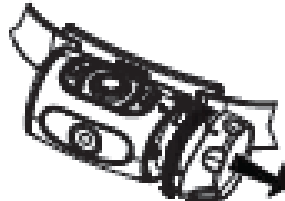

Step 2

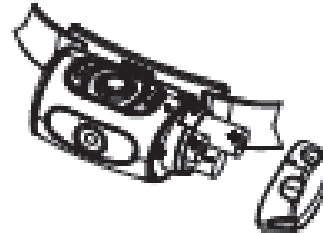


Step 3

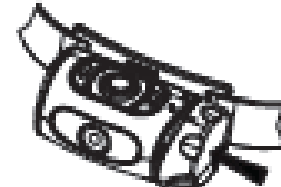


1. To remove battery cap, twist cap counter-clockwise to the unlock position.
2. Insert batteries according to the orientation markings on the inside of the battery cavity.
3. Reattach battery cap by aligning the white mark on the cap with unlock logo on the casing.
Twist cap clockwise to the lock position.

***Energizer*® Triple Beam LED Headlight Instruction Sheet**


HEADBAND INSERTION:

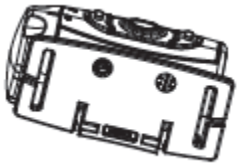


Step 1

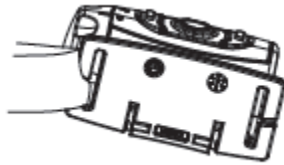

Step 2

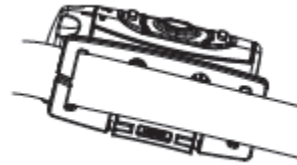

Step 3

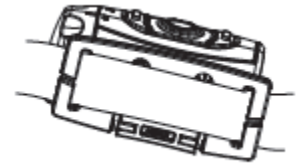

1. Thread headband through the back of the left slot.
2. Pull headband across the bracket. (The solid side of the strap should be facing outward.)
3. Thread headband through the front of the right slot.

***Energizer*®**

Mfd. for:
Energizer Holdings, Inc.,
St. Louis, MO 63141
© 2012 Energizer